

WEIGHING / REWORK / SORTING

RWS

Electrical connection

Mains connection 230V / N / PE / 50Hz
 Power 0.06 kW
 Pre-fuse max. 16 A
 Supply line min. 3G1.5mm²

Extensions

Box holder
 Clipboard holder
 Calibration weight
 Tray stack holder

How it works

- The rework station consists of two weighing surfaces and a display each that shows the current weight on the weighing surface.
- If the rework station is used as a stand-alone scale, a target weight, a lower weight limit and an upper weight limit can be set using the integrated LED display.
- It is also possible to connect the scale to a MULTIVAC machine via Ethernet, so that all RWS settings can be adjusted via the HMI of this machine
- The displays feature color LEDs that clearly and quickly indicate weight limits, enabling operators to work efficiently and effortlessly.
- The working height can be adjusted individually and ergonomically using the machine feet.

Impressive Technology

- Hygienic design
- Intuitive operation
- Robust and compact
- Standalone or as a line extension
- Ergonomic
- Flexible

